


Cellular Shade Installation Instructions

Standard Cord Lock


Please follow these Installation Instructions

You will need a pencil, tape measure, drill, screwdriver, pliers, and appropriate fasteners.

Step 1: Choose the Correct Fastener




1 1/2" #8 Hex Head Wood Screws (Included)

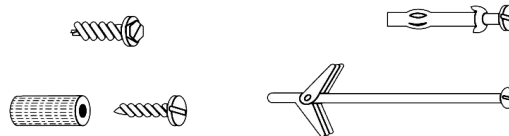

Alternative fasteners should be used for aluminum or concrete installations
(Not Included with Blinds)


Step 2: Mark the Bracket Locations

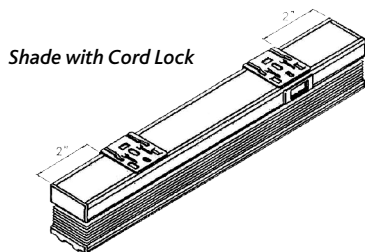


Position the first two installation brackets so that they are approximately 2" in from the end of the headrail. If a third bracket is included, center it between the outer brackets. Wide shades may include up to 8 brackets. In these cases, space the additional brackets evenly, not more than 25" apart. Mark the brackets for mounting hole locations, making sure they are square and equally spaced. For outside mount installations, use a level to check for levelness.

Step 3: Bracket Installation

(For Outside Mount Installations)
Screw brackets into wall as shown.

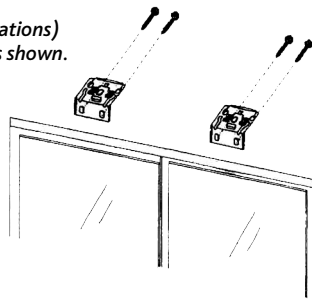


(For Inside Mount Installations)
Screw brackets in window frame as shown.

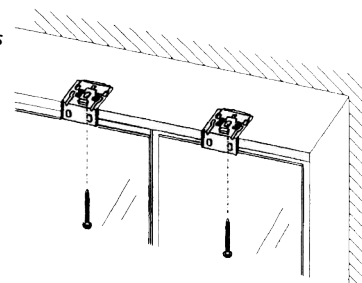

Step 4: Shade Installation

Hang the shade so that the front groove of the headrail is inserted into the front ridge of the bracket. Rotate the shade back toward the glass so that the headrail snaps into place. Make sure that the shade is locked in place.

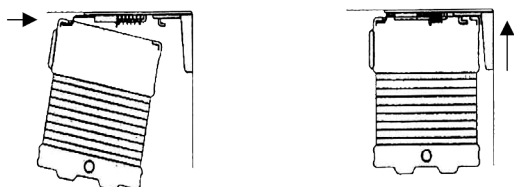

OPERATING INSTRUCTIONS:

To lower the shade: Pull the cord down and towards the center of the shade to unlock the cord. Then, slowly release the cord until the shade reaches the desired location. Move the cord past the outer edge of the shade and let go to lock the cord.

To raise the shade: Pull the cord straight down until the shade reaches the desired location. Move the cord past the outer edge of the shade and let go to lock the cord.


Cellular Shade Installation Instructions

Cordless & Cord Loop Clutch


Please follow these Installation Instructions

You will need a pencil, tape measure, drill, screwdriver, pliers, and appropriate fasteners.

Step 1: Choose the Correct Fastener




1 1/2" #8 Hex Head Wood Screws (Included)

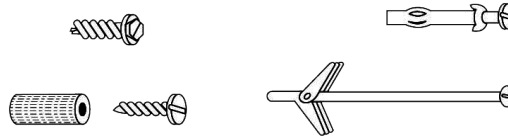


Alternative fasteners should be used for aluminum or concrete installations
(Not Included with Blinds)

Step 2: Mark the Bracket Locations

Shade with Cord Lock

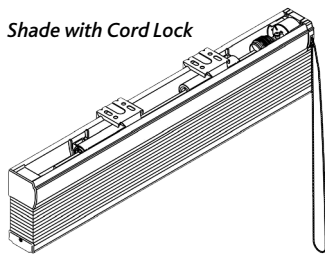


Position the first two installation brackets so that they are approximately 2" in from the end of the headrail. If a third bracket is included, center it between the outer brackets. Wide shades may include up to 8 brackets. In these cases, space the additional brackets evenly, not more than 25" apart. Mark the brackets for mounting hole locations, making sure they are square and equally spaced. For outside mount installations, use a level to check for levelness.

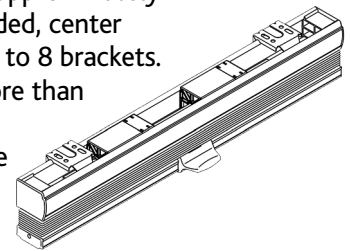


Step 3: Bracket Installation

(For Outside Mount Installations)
Screw brackets into wall as shown.

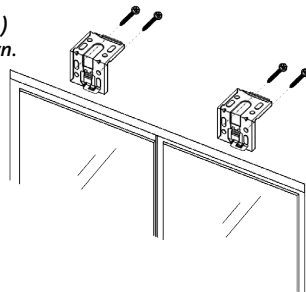


(For Inside Mount Installations)
Screw brackets in window frame as shown.

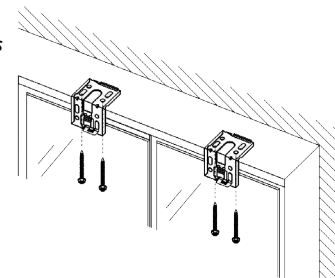

Step 4: Shade Installation

Hang the shade so that the front groove of the headrail is inserted into the front ridge of the bracket. Rotate the shade back toward the glass so that the headrail snaps into place. Make sure that the shade is locked in place.

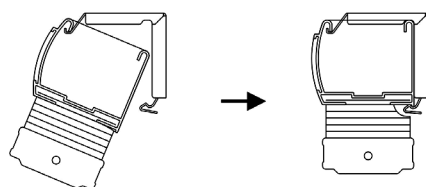

OPERATING INSTRUCTIONS:

Shades with Cord Loop Clutch

To lower the shade: the back cord straight down until the shade reaches the desired location and then release.

To raise the shade: Pull the front cord straight down until the shade reaches the desired location and then release.

Cordless Shade

To lower or raise the shade: Grasp the handle attached to the bottom rail and adjust the shade up or down until the shade reaches the desired location and then release.