



PO BOX 46945
PHILADELPHIA, PA 19160

PHONE: 215-455-2266
FAX: 877-462-3302

Premier Aluminum Blind Collection

CHECK ONLY ONE SAMPLE BOOK OR COLLECTION PER ORDER FORM
Use a separate form for each different product ordered. Use as many forms as you need to complete your order.


SEE OTHER SIDE FOR "HOW TO MEASURE"

SHIP TO INFORMATION

Account #
Account Name
Address
City, State, Zip
Phone Number
Fax Number

Name
Address
City, State, Zip
Phone
Special Instructions

DATE
SIDEMARK
P.O. #
ORDERED BY
DATE NEEDED
PAGE _____ OF _____

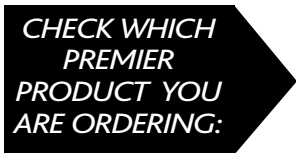

Basic Traditional
Deluxe Value
Macro

OPTIONS: Wand Cord Tilt (2" Only) Lift Cord

* For 2 or 3 blinds-on-one headrail - enter width of each blind in SPECIAL INSTRUCTIONS.
Also specify blind position ... left, right or middle.

SELECT OPTIONS

QTY	WIDTH (inches)	HEIGHT (inches)	SLAT COLOR	COLOR NUMBER	CONTROL LOCATIONS			TYPE OF MOUNT	HOLD DOWNS	SPACER BLOCKS	EXTENSION BRACKETS	VALANCE CLIPS	CHANNEL VALANCE	2 ON 1*	3 ON 1*	PRIVACY
					Wand	CORD TILT (2" ONLY)	LIFT CORD									
1					L R	L R	L R	IB OB								
2					L R	L R	L R	IB OB								
3					L R	L R	L R	IB OB								
4					L R	L R	L R	IB OB								
5					L R	L R	L R	IB OB								
6					L R	L R	L R	IB OB								
7					L R	L R	L R	IB OB								
8					L R	L R	L R	IB OB								
9					L R	L R	L R	IB OB								

ADDITIONAL INSTRUCTIONS: _____

ORDER FORM

PREMIER Aluminum Blinds Collection

MEASURING GUIDELINES

FOR ACCURATE MEASUREMENTS: For best accuracy use only a hard-edged ruler or steel tape measure, never a cloth tape. Measurements should be rounded down to the nearest 1/8 inch for inside mounts to ensure that the blinds fit properly within the window casing.

INSIDE MOUNTING

Blind or shade hangs inside the window frame and provides a flush look.

FOR WIDTH (A)


Measure across the window casing from one inside edge to the other in three places: top, middle, and bottom. Record the **smallest** width rounded **down** to the nearest 1/8 inch.

FOR THE HEIGHT (B)

Measure inside the window casing from the top inside edge down to the top of the sill in three places: left, middle and right. Record the **shortest** height rounded **down** to the nearest 1/8 inch.

Make NO allowance for inside mounting. All deductions will be made by the factory.

Note: When ordering, be sure to account for mounting surface required. Consult the reference guide for specifics on minimum depths for mounting brackets, and depths needed for flush inside mounts.

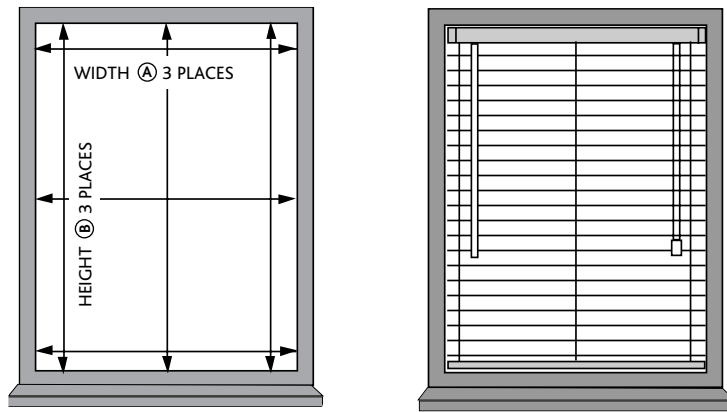


OUTSIDE MOUNTING

Blind or shade hangs outside the window opening on the wood frame itself, or on the wall above the frame, extending beyond the sides of the frame to make the window appear longer and wider, or to hide an unattractive window.

For mounting your horizontal blinds **directly to the wood frame**, measure the exact width and height of the wood frame itself from outer edge to outer edge. Keep in mind that the mounting brackets require a minimum flat surface (see reference guide).

To mount **above and beyond the wood frame** add 2 to 3 inches to each side of the window to minimize light gap (as long as you have enough room). The height above the window must account for the mounting brackets.

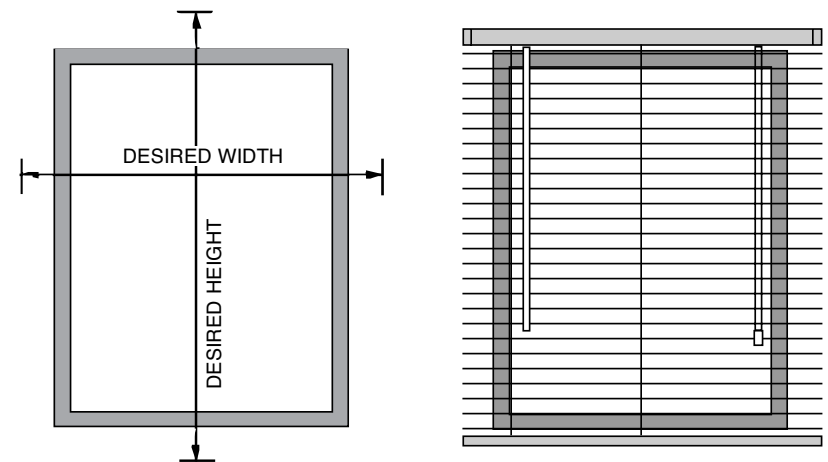

Record measurements on other side ►